



## INTRODUCTION

This guide will assist with the replacement of the Sony Vaio PCG-7184L's optical drive. Please review the [Troubleshooting Guide](#) before replacing your optical drive.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Optical Drive



- Locate and unscrew the two highlighted 8 mm Phillips #1 screws.
- ⓘ There will be three dots next to the desired screws

## Step 2



- Grip the cover of the optical drive and slide it out.
- ⚠ If it does not come out, do not force it. Double check to make sure the screws are entirely removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:51:33 PM.